


## INTERIOR TRIM

### 3 TRUNK BOX REMOVAL/INSTALLATION

id091700805200

Remove the screws.  
Remove the sub trunk box.  
Install in the reverse order of removal.

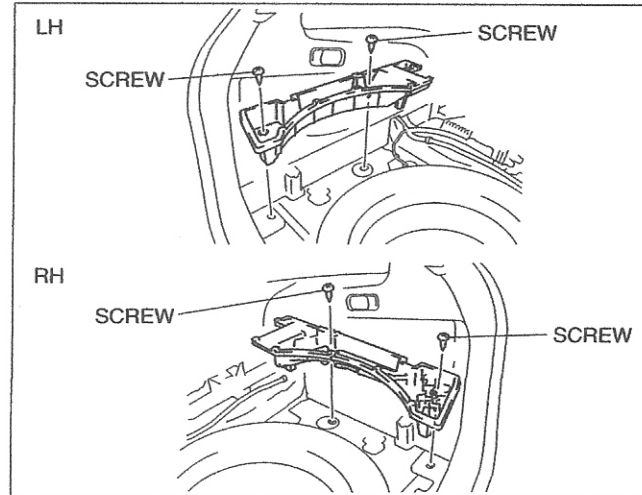


acxuww00000921

id091700803600

### LIFTGATE UPPER TRIM REMOVAL/INSTALLATION

Pull the liftgate upper trim and detach clips A and B, pin C.  
Remove the liftgate upper trim.  
Install in the reverse order of removal.

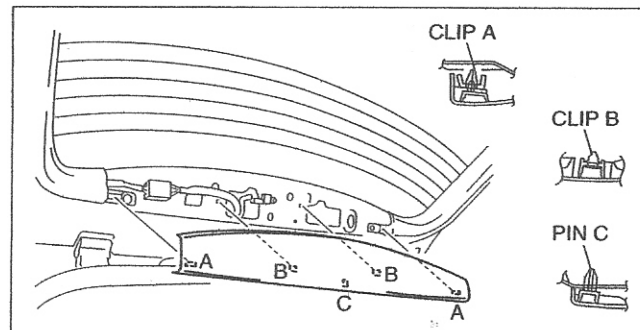

acxuww00000868

id091700803700

### LIFTGATE SIDE TRIM REMOVAL/INSTALLATION

Remove the liftgate upper trim. (See 09-17-25 LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)  
Remove the fastener.  
Pull the liftgate side trim toward you, then disengage the clip A and pin B from the body.  
Remove the tab C, E and clip D.  
Remove the liftgate side trim.  
Install in the reverse order of removal.

