


CONTROL SYSTEM

BCM Disassembly Note

1. Raise the lower part of the BCM in the direction shown by the arrow and remove the pin with the BCM level.

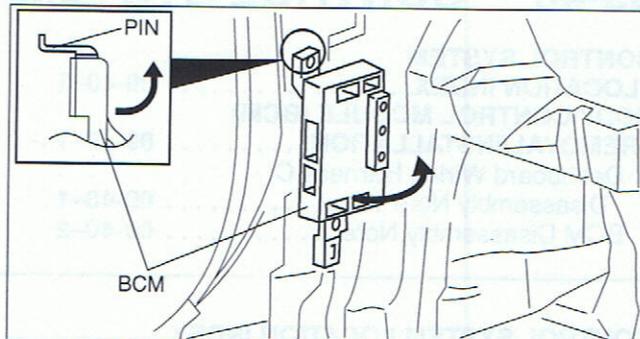


ac9uuw00000700

BODY CONTROL MODULE (BCM) INSPECTION

id094000800300

1. Remove the front scuff plate inner (LH). (See 09-17-23 FRONT SCUFF PLATE REMOVAL/INSTALLATION)
2. Remove the front side trim (LH). (See 09-17-23 FRONT SIDE TRIM REMOVAL/INSTALLATION.)
3. Remove the dashboard under cover. (Driver Side) (See 09-17-14 DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
4. Set the hood release lever out of the way. (See 09-14-46 HOOD LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
5. Remove the BCM with the connector connected.
6. Measure the voltage at each terminal as indicated in the Terminal Voltage Tables.
 - If the voltage or continuity is not as specified in the Terminal Voltage Table, inspect the parts under "Inspection item (s)".
 - If the system does not work properly even though the parts or related wiring harnesses do not have any malfunction, replace the BCM.

Terminal Voltage Table (Reference)

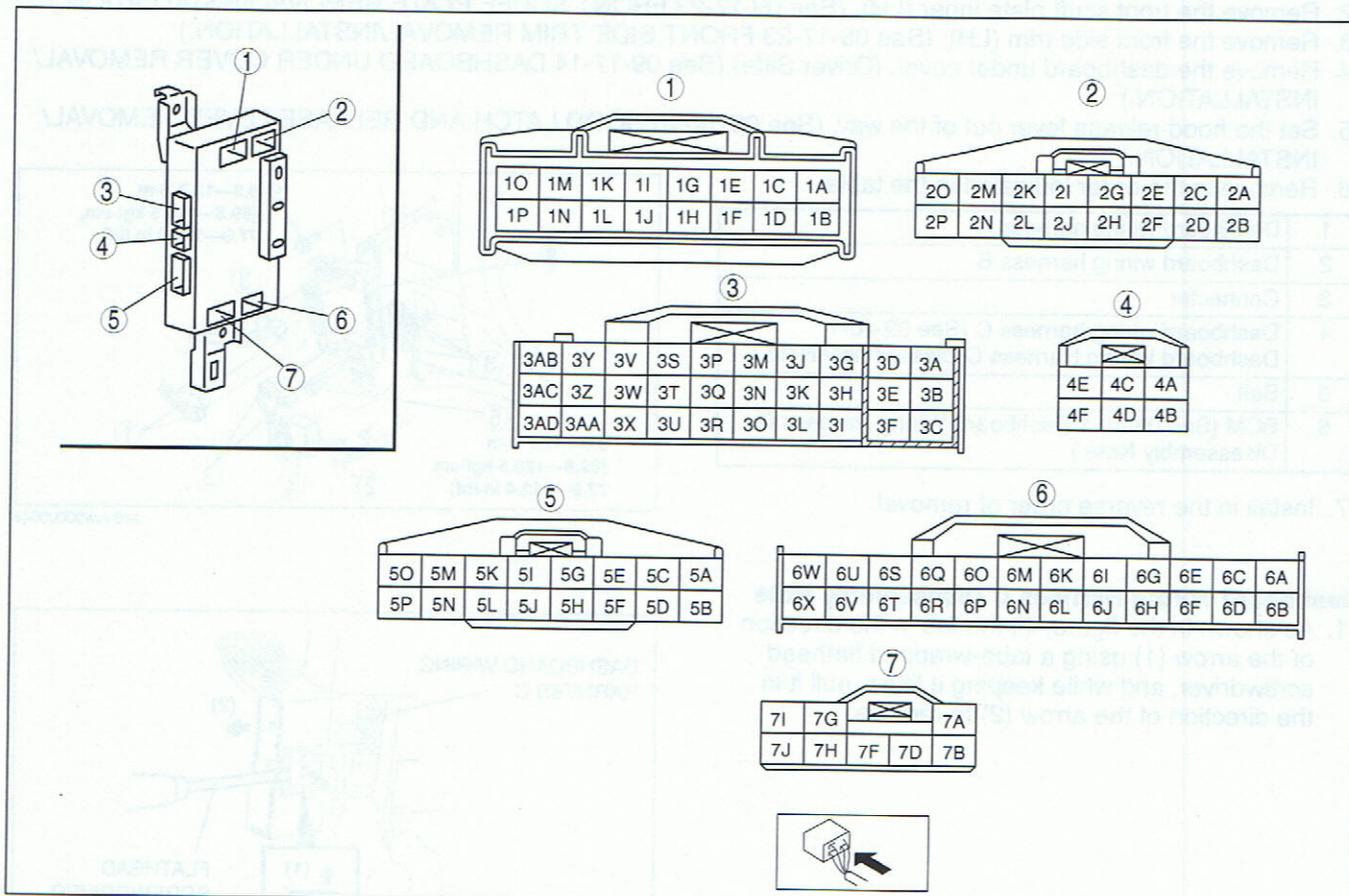

ac9uuw00000703