

CONTROL SYSTEM

Terminal	Signal	Connected to	Measurement condition		Voltage (V)	Inspection item (s)
1A	Oil pressure switch signal	Oil pressure switch	Ignition switch at ON	When the engine is running (oil pressure switch on)	1.0 or less	<ul style="list-style-type: none"> Oil pressure switch Related wiring harnesses
				When the engine is not running (oil pressure switch off)	B+	
1B ^{*1}	Hood latch switch signal	Hood latch switch	Hood open (Hood latch switch off)		5	<ul style="list-style-type: none"> Hood latch switch Related wiring harnesses
			Hood closed (Hood latch switch on)		1.0 or less	
1C	Washer level signal	Washer fluid-level sensor	Ignition switch at ON	Washer level below MIN.	1.0 or less	<ul style="list-style-type: none"> Washer fluid-level sensor Related wiring harnesses
				Washer level above MIN.	B+	
1D	Brake fluid level signal	Brake fluid-level sensor	Ignition switch at ON	Brake fluid level below MIN.	1.0 or less	<ul style="list-style-type: none"> Brake fluid level sensor Related wiring harnesses
				Brake fluid level above MIN.	B+	
1E ^{*1}	Lock/unlock input (passenger-side door lock-link switch)	Passenger-side door lock-link switch	Passenger-side door locked		5	<ul style="list-style-type: none"> Passenger-side door lock-link switch Related wiring harnesses
			Passenger-side door unlocked		1.0 or less	
1F	Front turn light (LH) control	Front turn light (LH)	Turn switch (LH) on	Front turn light (LH) flashes	Alternates between 1.0 or less and B+	<ul style="list-style-type: none"> Front turn light (LH) Related wiring harnesses
			Hazard warning switch on			
			Other	1.0 or less		
1G	Front turn light (RH) control	Front turn light (RH)	Turn switch (RH) on	Front turn light (RH) flashes	Alternates between 1.0 or less and B+	<ul style="list-style-type: none"> Front turn light (RH) Related wiring harnesses
			Hazard warning switch on			
			Other	1.0 or less		
1H	Lock/unlock signal	Door lock switch (passenger side)	Door lock switch (passenger side) is pressed to lock.		2.5	<ul style="list-style-type: none"> Door lock switch (passenger side) Related wiring harnesses
			Door lock switch (passenger side) is pressed to unlock.		1.0 or less	
			Other		5	
1I	Front side turn light (RH) control	Front side turn light (RH)	Turn switch (RH) on	Front side turn light (RH) flashes	Alternates between 1.0 or less and B+	<ul style="list-style-type: none"> Front side turn light (RH) Related wiring harnesses
			Hazard warning switch on			
			Other		1.0 or less	
1J	CAN_L	—	Because this terminal is for communication, good/no good judgment by terminal voltage is not possible.		—	<ul style="list-style-type: none"> Related wiring harnesses
1K	Parking brake switch signal	Parking brake switch	Ignition switch at ON	Parking brake switch on	1.0 or less	<ul style="list-style-type: none"> Parking brake switch Related wiring harnesses
				Parking brake switch off	B+	
1L	CAN_H	—	Because this terminal is for communication, good/no good judgment by terminal voltage is not possible.		—	<ul style="list-style-type: none"> Related wiring harnesses
1M	Back-up light power supply	Back-up light relay	Ignition switch at ON	The selector lever is in the R position	B+	<ul style="list-style-type: none"> Back-up light relay Back-up light Related wiring harnesses
				Other	1.0 or less	

09-40