



Trunk end trim removal


1. Partially peel back the weatherstrip.

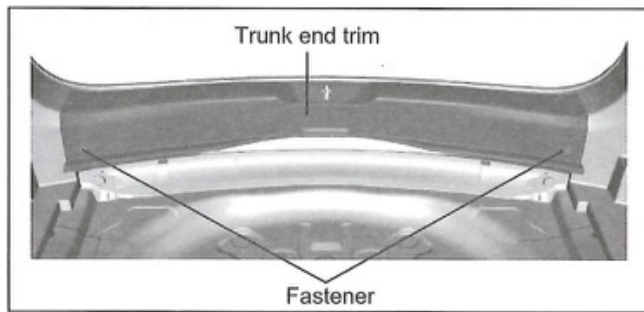

2. Remove the fasteners.

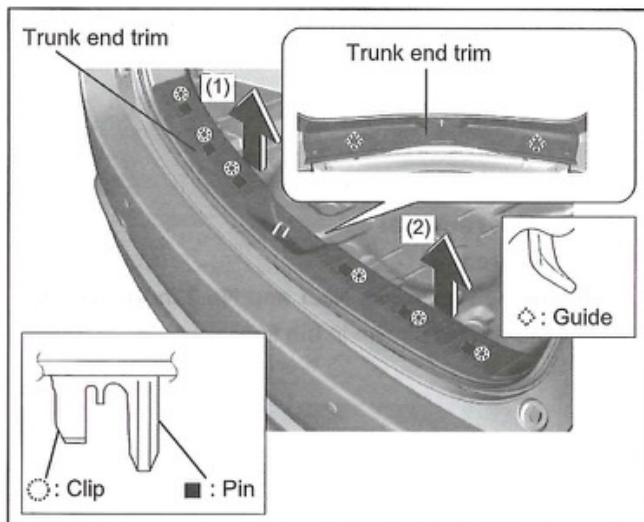


3. Move the trunk end trim in the order of arrows (1) and (2) shown in the figure, remove it while detaching the clips, pins, and the guides.

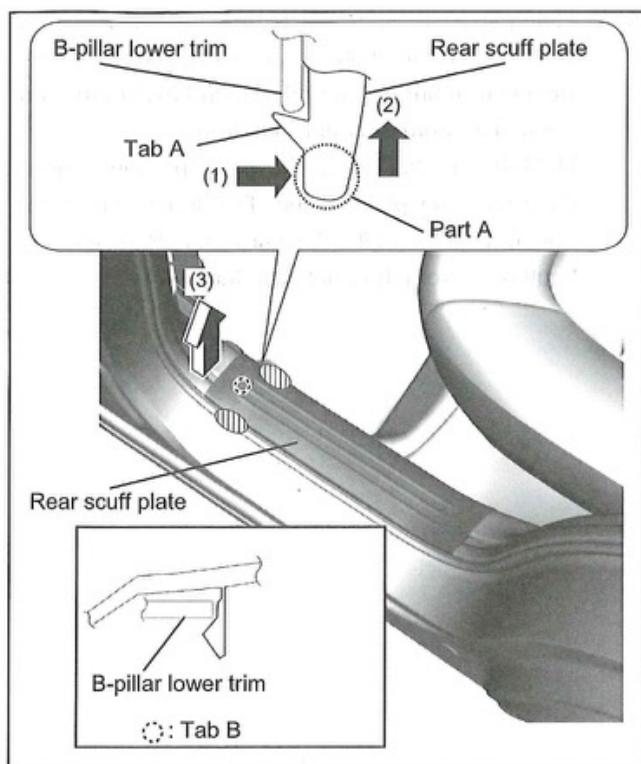


Rear scuff plate removal


1. Hold part A shown in the figure, open the rear scuff plate in the direction of arrow (1), move it in the direction of arrow (2), and detach tab A of the rear scuff plate from the B-pillar lower trim.
2. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (3), and detach tab B of the rear scuff plate from the B-pillar lower trim.

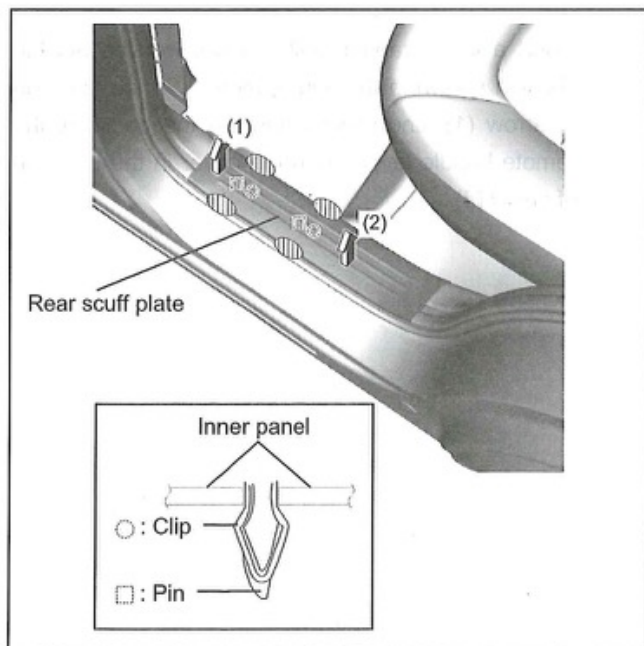


3. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (1), detach the clip from the inner panel, and pull out the pin.
4. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (3), and remove it while detaching tab B of the rear scuff plate from the trunk side trim.

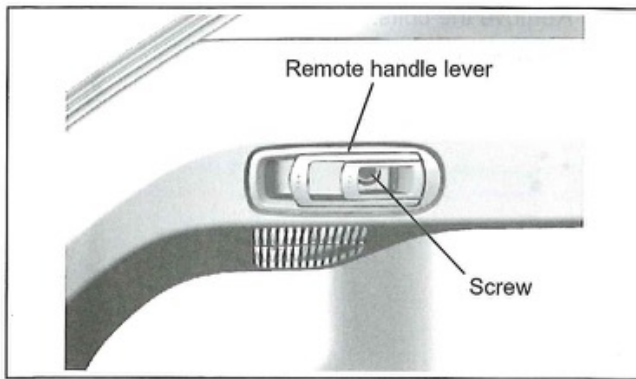


2. Remove the screw.

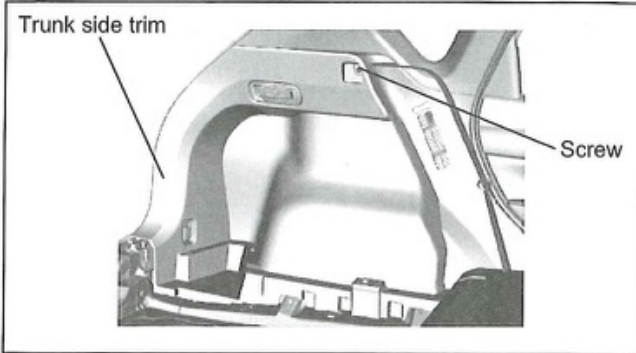


3. Remove the screw.

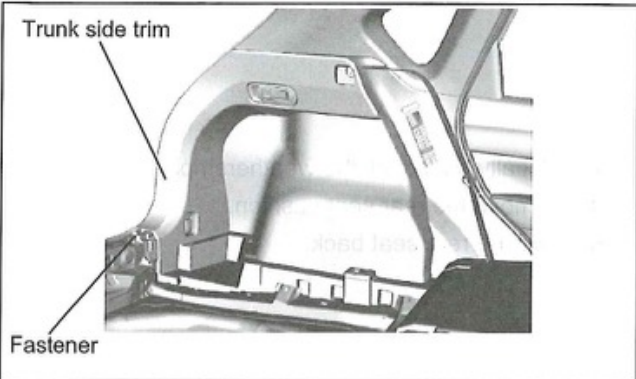


4. Remove the fastener.

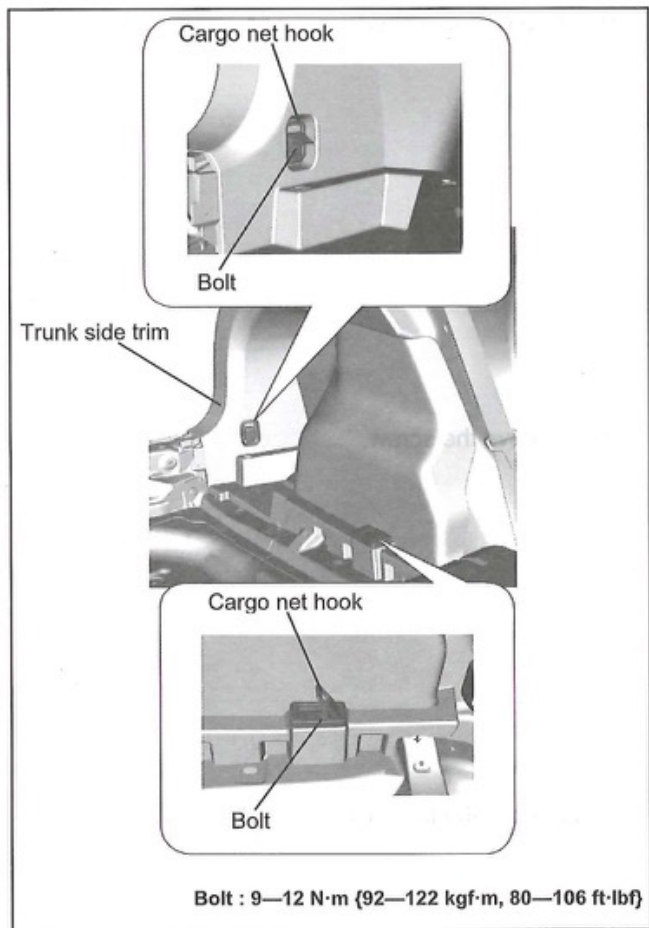

5. Remove the bolts.
6. Remove the cargo net hooks.

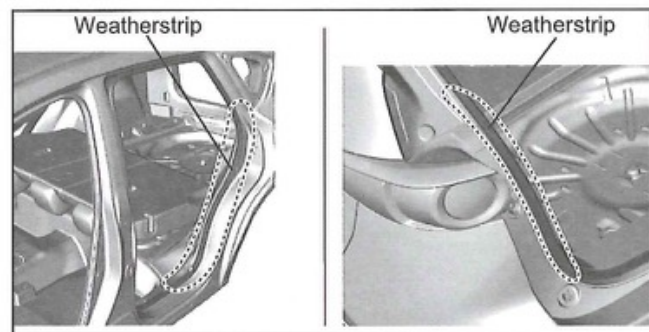


7. Partially peel back the weatherstrips.
8. Remove the rear seat cushion.
9. Fold the rear seat back.

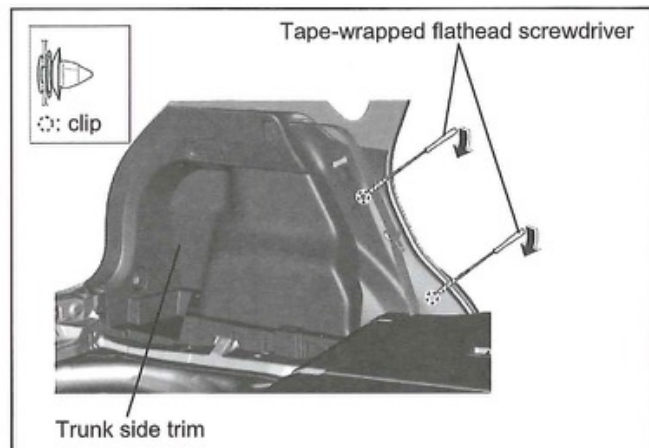


10. Insert a tape-wrapped flathead screwdriver into the position shown in the figure, move it in the direction of the arrows, and remove the clips.


Left side only

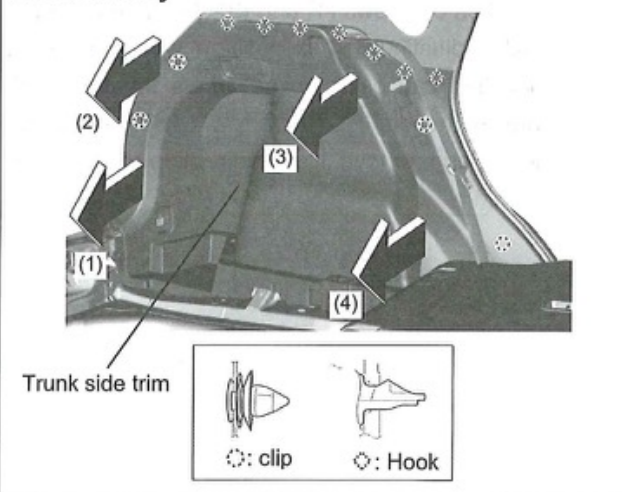


11. Move the trunk side trim in the order of arrows (1), (2), (3), and (4) shown in the figure, and remove the clips and hooks.

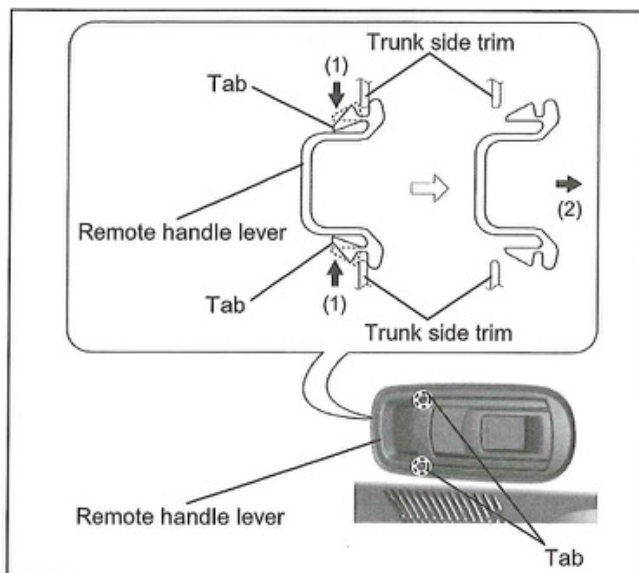

12. Insert a hand into the back side of the trunk side trim, press the tabs of the remote handle lever in the direction of arrows (1) shown in the figure, and remove the remote handle lever in the direction of arrow (2).

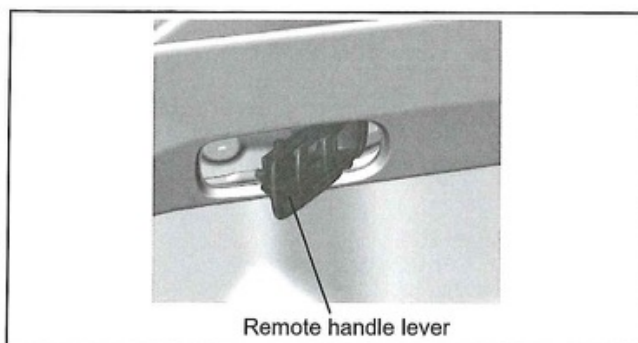

13. Set the remote handle lever aside.

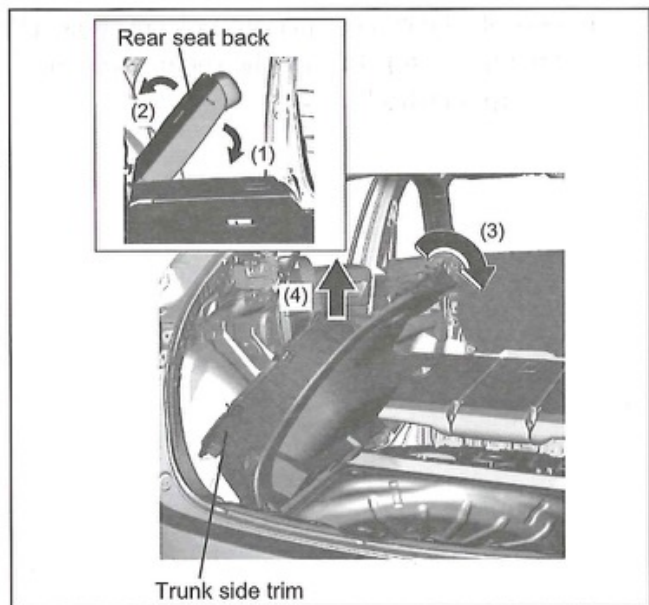

14. Move the position of the rear seat back in the direction of arrows (1) and (2) shown in the figure, while adjusting it at a position where the trunk side trim can be removed, move the trunk side trim in the direction of arrow (3) shown in the figure, and remove it in the direction of arrow (4).