


BODY PANELS

3. Remove in the order indicated in the table.

1	Screw A
2	Bolt
3	Fastener A
4	Fastener B
5	Screw B
6	Front bumper (See 09-10-4 Front Bumper Removal Note) (See 09-10-4 Front Bumper Installation Note)

4. Disconnect the front fog light connector. (Vehicles with front fog lights)
5. Install in the reverse order of removal.
6. Adjust the front fog light aiming for vehicles with front fog lights. (See 09-18-11 FRONT FOG LIGHT AIMING.)

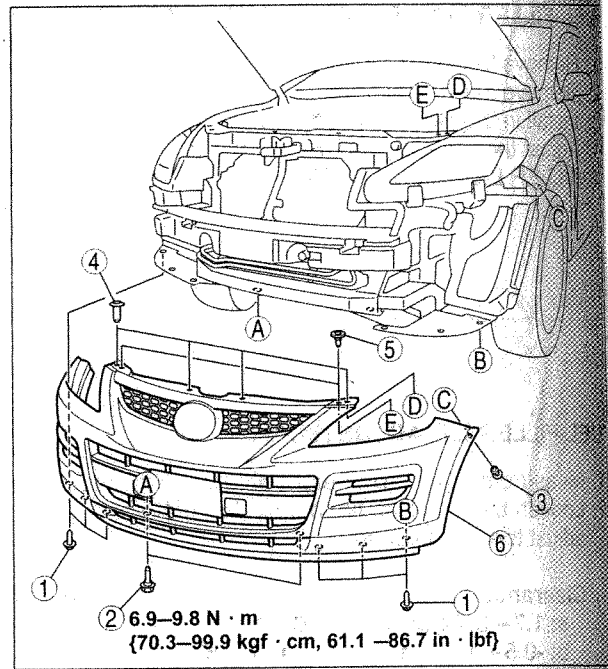


Front Bumper Removal Note

1. Pull the front bumper ends (wheel arch) outward (1) to disengage from the bumper slider.

Caution

- When disengaging the front bumper from the bumper slider, the front bumper could fall and be damaged. Secure the front bumper so that it does not fall.

2. Remove the front bumper from the body.

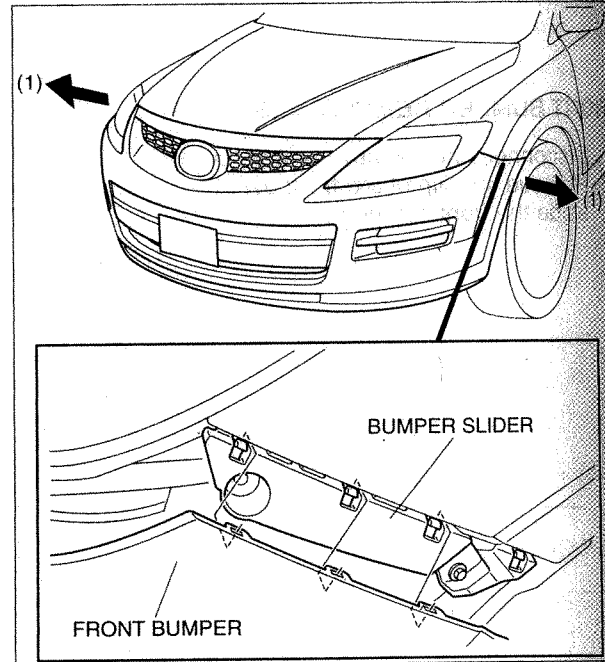

Front Bumper Installation Note

1. Spread the front bumper ends apart.
2. Assemble the front bumper to the body.
3. Press the front bumper connecting area into the body to engage with the bumper slider.