


5. Remove nuts A, and remove the slide motor and cable B.

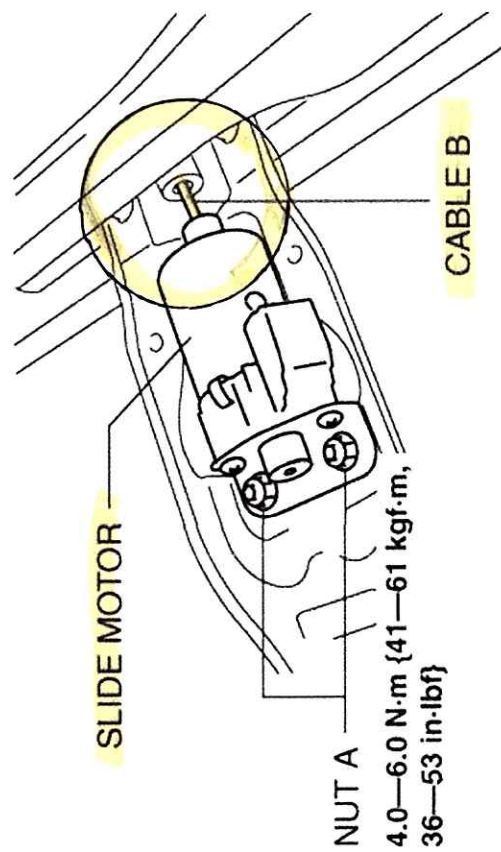

7. Remove screws B, and remove the bracket from the slide motor.