
■ TOUCH SENSOR

id091400501000

id091400501000

DOOR RELEASE TOUCH SENSOR

Purpose



- Transmits the touch sensor operation of the user to the LF control unit.

Function

- The door unlock signal is sent to the LF control unit by touching the touch sensor.

Construction, Operation

- Installed on the outer handle of the driver-side/passenger-side front door.
- When a capacitance change is detected by touching at the unlock area of the touch sensor, an output unlock signal is sent to the LF control unit.

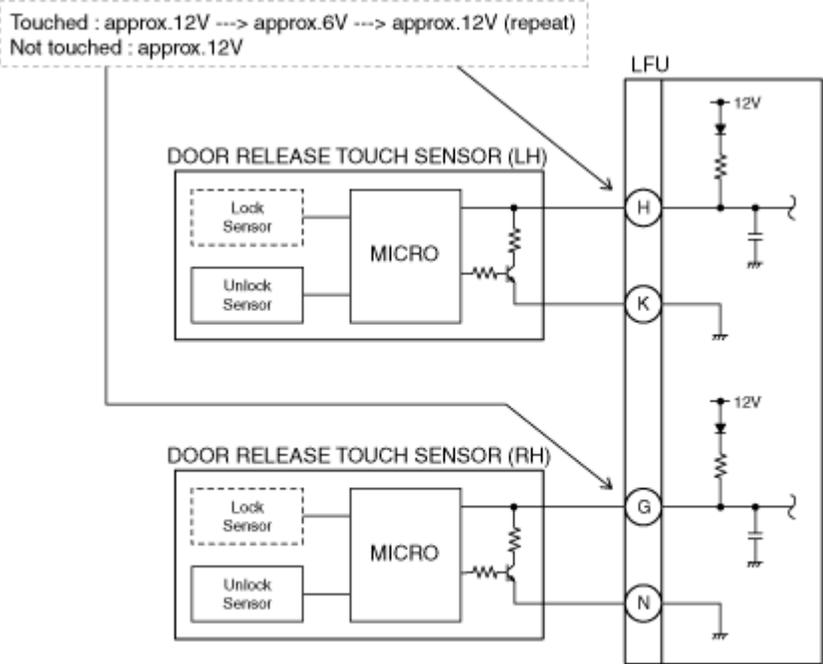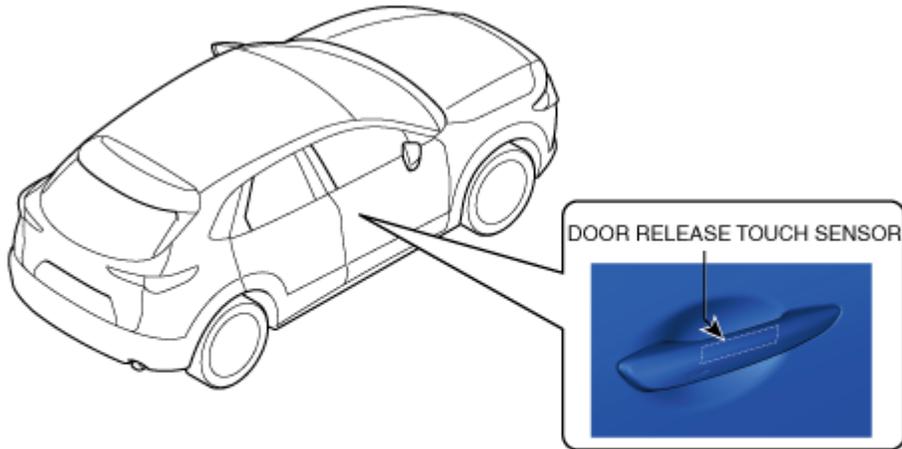

ac30zn00000201

DOOR LOCK TOUCH SENSOR

Purpose



- Transmits the touch sensor operation of the user to the LF control unit.

Function

- The door lock signal is sent to the LF control unit by touching the touch sensor.

Construction, Operation

- Installed on the outer handle of the driver-side/passenger-side front door.
- When a capacitance change is detected by touching at the lock area of the touch sensor, an output lock signal is sent to the LF control unit.

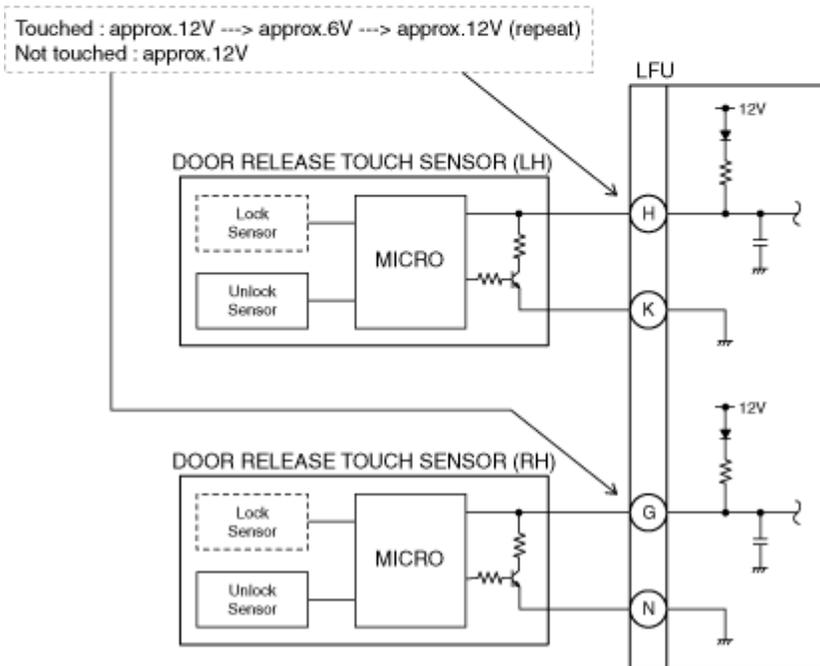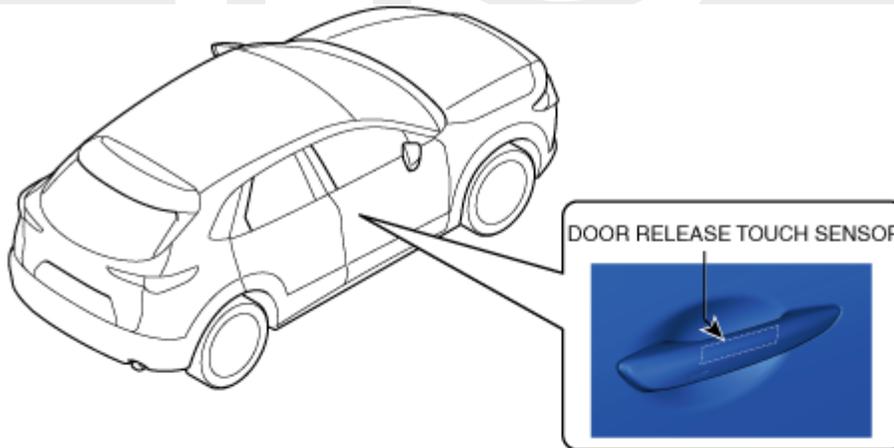

ac30zn00000202