

UREA INJECTOR [SKYACTIV-D 2.2]


id0116e1285500

With SCR system Purpose, Function

- The urea injector injects AdBlue® according to the control signal from the dosing control unit.

Construction


- The urea injector is installed near the SCR converter.

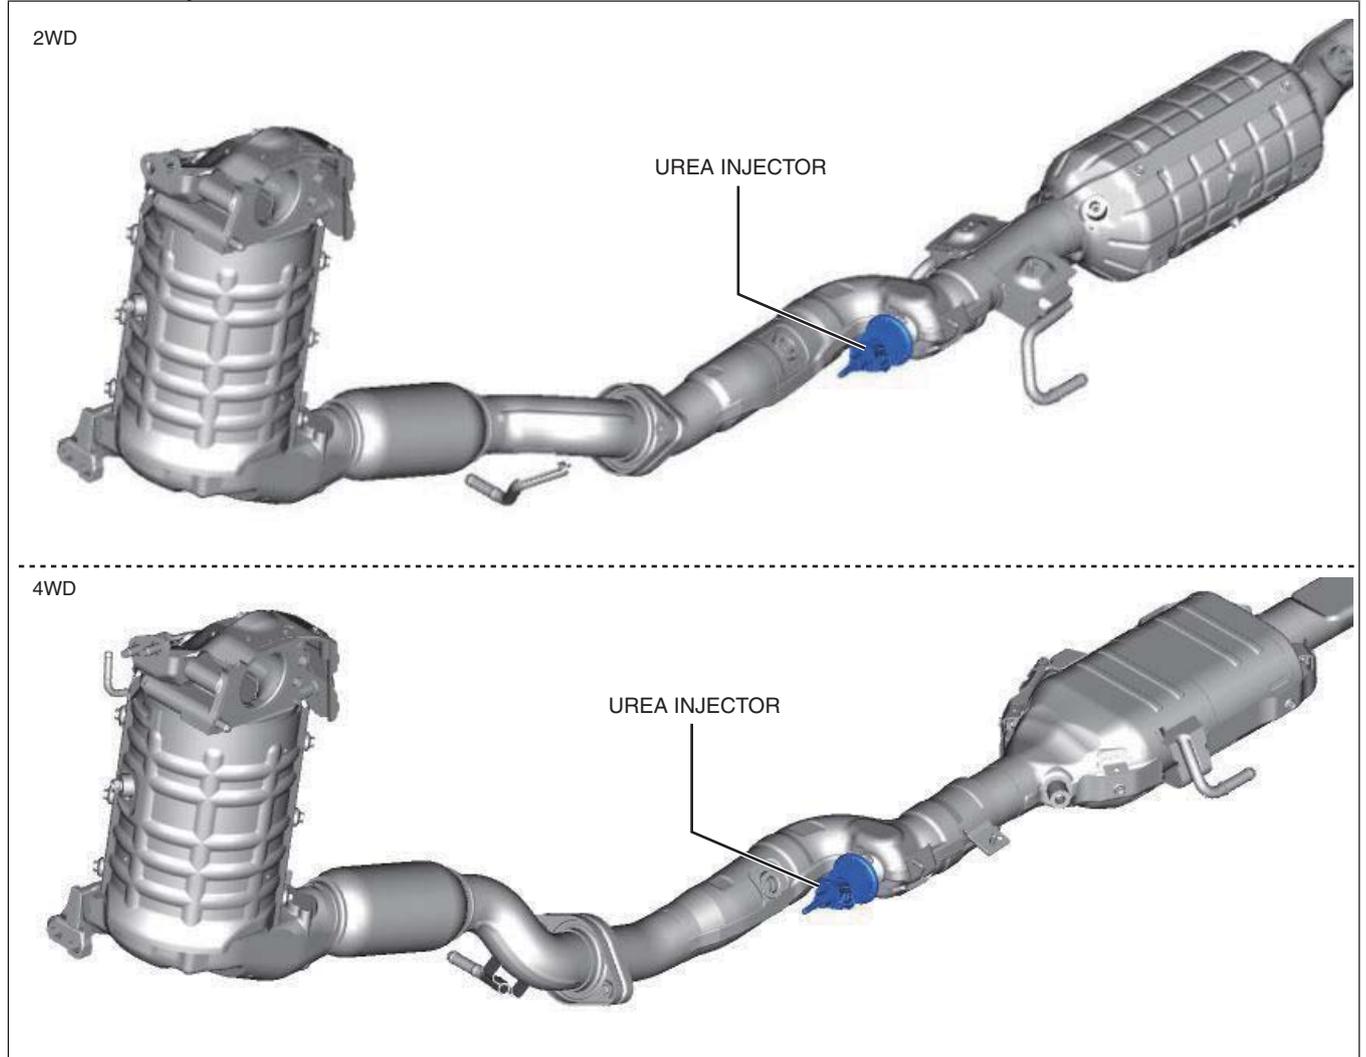

ac5wzn00005012

Operation

- The solenoid valve of the urea injector is opened according to the signal from the dosing control unit, and injects AdBlue®.

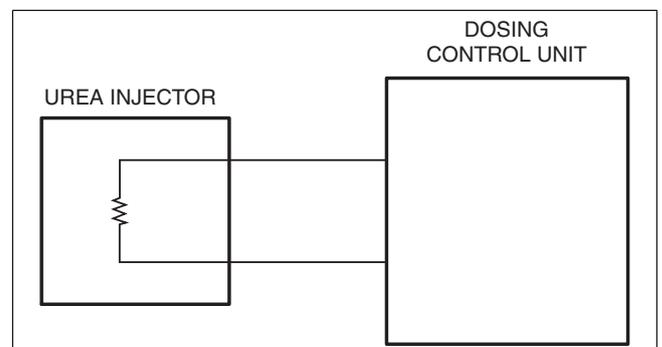

ac5uun00003535