



GENUINE ACCESSORIES


INSTALLATION INSTRUCTIONS

PART NUMBER:
0000-8R-C19

MAZDASPEED PEDALS

APPLICABLE MODELS:
2003.5> MAZDASPEED
PROTEGE (MANUAL)

PACKAGE CONTENTS

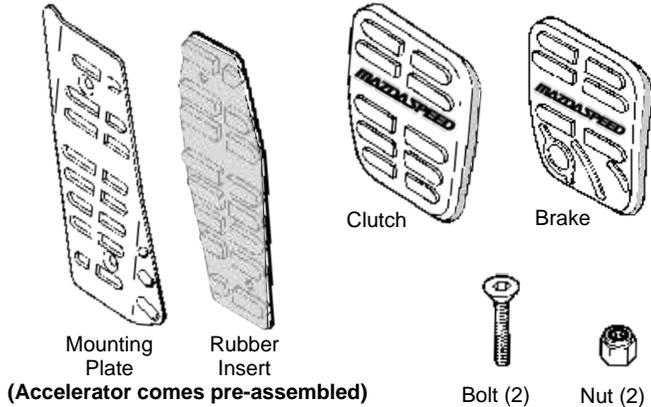

TOOLS REQUIRED


- 7mm socket or box wrench
- 2.5mm allen wrench
- Ratchet
- In/lbs torque wrench
- Electric or air drill - 90°
- 4.5mm drill bit (or 3/16")
- Mirror
- Hook tool/Hose remover tool
- 5/32" Awl or Punch

0 Before Installation

1. Read through entire instruction manual before proceeding.
2. Wear eye protection.
3. Apply parking brake.

1 Remove Original Pedal Covers

1. Remove rubber covers from brake and clutch pedals.
2. Place protection under accelerator to catch metal shavings.

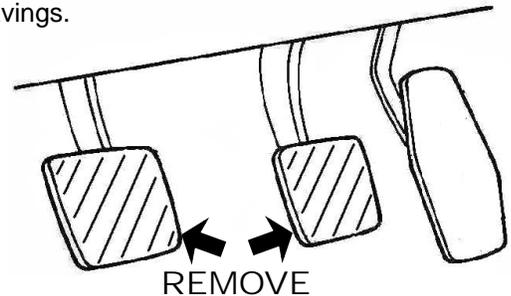


2 Drilling Pedal (Accelerator)

1. Using the new accelerator pedal cover as a guide, place the cover on the pedal pad and mark the hole locations with a 5/32" awl.
2. Remove the pedal cover and make sure the marks are clearly visible.
3. Drill (2) 4.5mm holes through the accelerator pedal pad.

3 Pedal Installation (Accelerator)

1. Install accelerator to pedal with (2) allen head screws & nuts supplied in kit.
2. Tighten screws securely, bottom first, using ratchet, 7mm socket & 2.5mm allen wrench. Torque to 22-31 inch/lbs.

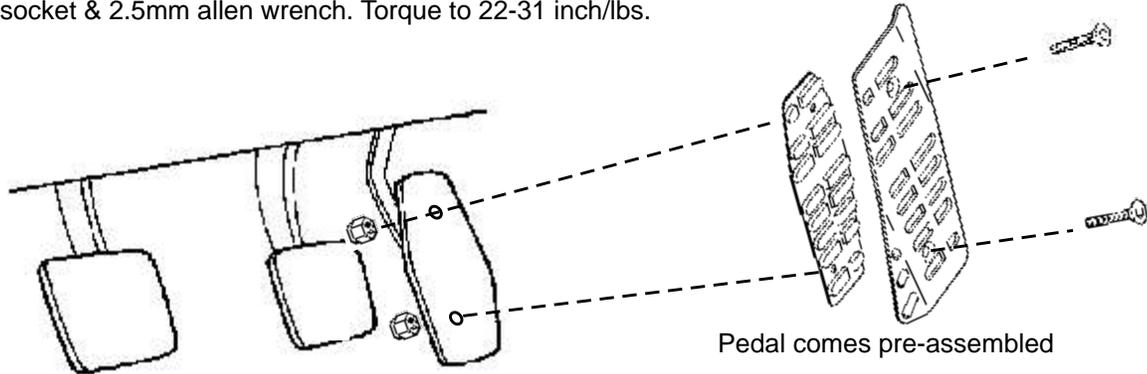

4 Pedal Installation (Clutch & Brake)

**NOTE: Make sure to put the correct pedal cover on the correct pedal.
See page 1 for correct pedal identification.**

1. Insert the pedal flange into bottom of the pedal cover while hand spreading the rubber grommet sides to peel over the pedal flange. Only about half of the grommet will peel over the flange.
2. From one side of the pedal, insert the hook tool between the cover and the pedal flange, starting at a corner, carefully push the hook up to peel the rubber grommet over the pedal flange towards the next corner. Be careful not to twist the tool, this may result in tearing the grommet.
3. Using a mirror, look at the back of the pedal to make sure the entire pedal is seated properly.
4. Repeat on remaining pedal.

Insert tool under rolled edge and carefully push up to help roll the grommet over the edge.

Repeat the process over top edge.

CAUTION: Considerable care must be taken at and around the corners so not to tear the rubber grommet. Tearing of the rubber grommet may cause the grommet not to roll over the edge resulting in a poor installation condition and the possibility of the cover falling off when driving. If the grommet is torn, the pedal cover must be replaced.

